



HEATRITE NZ

UNDERTILE HEATING SPECIALIST

SUPPLY, INSTALL AND WHOLESALE

COMFORT

Heatrite works by radiating heat from the floor to the ceiling allowing for an even ambient temperature around the room. It heats the surface of the floor so you can enjoy a warm and cosy home. Walking barefoot on warm floors not only feels pleasurable it heats the heart and the body making you feel relaxed and comfortable.

INSTALLATION AND MAINTENANCE

Heatrite underfloor heating is easy to install in new builds or home renovations, it is installed before the floor coverings are laid and can be installed under any floor covering. There is no maintenance, just turn it on, set your controller thermostat and enjoy the comfort of warm floors and comfortable room temperatures.

ENERGY SAVING

Heatrite underfloor heating provides radiant heat distribution with lower temperatures required than other conventional heating systems.

Combined with the easy to use programmable thermostat for heating control makes it a more efficient way to heat your home. Add in our floor insulation board to transform your underfloor heating experience.

SAFETY AND HEALTH

Underfloor heating is placed under the floor coverings, it creates no burn hazards and poses no risk for physical injury due to accidental contact causing trips or falls. In wet areas underfloor heating speeds the evaporation of water, helping to dry up shower or wet room areas.

It doesn't circulate dust like some conventional heaters and can eliminate dust mites and reduce allergens in the air.

Quality components have been used to manufacture our heating system. These have been thoroughly tested and meet all the requirements for the New Zealand and International Safety standards.

GUARANTEE

Heatrite underfloor heating system comes with a lifetime warranty on all the elements.

Our touchscreen controller thermostats comes with a five year warranty.

